



Kickr IV™ User Manual

Technical Specifications

Configuration

4 panel solar charger with regulated USB output

Power

6.5 Watt photovoltaic unregulated

6.0 Watt, 5 Volt System regulated

1.2 Amp output

Dimensions

Opened Size 774mm x 184.15mm x 2mm

Folded Size: 225mm x 186 mm

Folded Thickness: 12 mm solar panels, 18 mm USB Port

Weight: 292.9g (0.65lb)

Cautions and Warnings

- Avoid immersion in water. If water is splashed on the modules, dry them immediately with a dry cloth or towel.
- Avoid splashing water in or around the USB box area. If exposed to water, immediately shake or blow water from the box.
- Do not bend or crease the modules except where provided for by the hinges.
- Avoid partially shading modules under load to prevent reduction in power.
- Artificially concentrated sunlight (i.e. with a magnifying glass or by other means) shall not be directed onto the modules.
- Do not cut, scratch, or puncture the modules, hinges, or end terminal.
- Do not stand on or walk on the modules, hinges, or end terminal.
- Do not drop or allow objects to fall onto the modules, hinges, or end terminal.
- Do not attempt to open, or otherwise dismantle the USB box.

Apple™ Product Warning

When charging Apple™ consumer devices (i.e. iPods, iPhones, iPads, etc.), a time-out will occur when the Kickr does not receive direct sunlight onto its panels. This will result in an incompatibility message on your Apple™ product. To resume charging, please unplug and re-plug the unit into the Kickr.

What Can EnerPlex Kickr™ IV Do?

The EnerPlex Kickr™ IV can charge most devices that are USB enabled. Below are some examples of charging times of products exposed in ideal sun conditions.

- iPhone 4S- 1.5 hours
- iPhone 5- 1.5 hours
- Samsung Galaxy SIII- 2.1 hours
- Kindle Fire- 4.4 hours


In addition to the above, the EnerPlex Kickr™ IV can charge...

- Digital Cameras
- GPS devices
- Camcorders
- MP3Players
- iPods
- Some Tablets
- And more....

Getting Started

1. Unfold the EnerPlex Kickr™ IV to ensure all four panels are exposed to the sun.
2. Firmly connect the charging cord from the device you are charging into the USB port on the EnerPlex Kickr™ IV.
3. For best results, position and angle your EnerPlex Kickr™ IV in a location where it will receive maximum exposure to the sun
4. When finished charging, disconnect the charging cord from the USB port and refill and strap the EnerPlex Kickr™ IV into its compact, travel-ready format.

Folding the EnerPlex Kickr™ IV

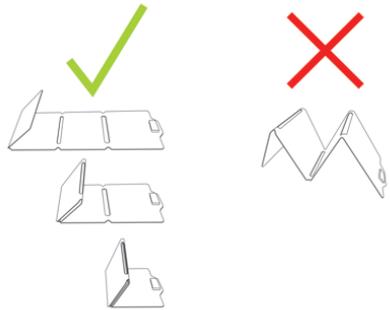

Other EnerPlex Gear: See the latest at www.goenerplex.com

Warranty information available at www.goenerplex.com